www.rcrflooringproducts.com RCR Flooring Products Limited Mill Close, Lee Mill Industrial Estate, Ivybridge, Devon, PL21 9GL t: +44 1752 895288 f: +44 1752 395800 e: info@rcrflooringproducts.com




Permaban AlphaJoint Installation Guide

Installation Guide Issue V1.0 14/07/22


01 Placing the AlphaJoint

Place joints on the floor with sleeves pointing up.

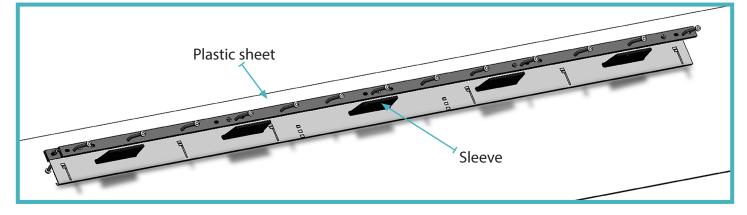

02 Place pins

Pins are situated towards the end of the stud, then tack welded in place. The tack weld will break under the pressure of the concrete, this will allow the joint to open along the length of the stud with the pin still in place.

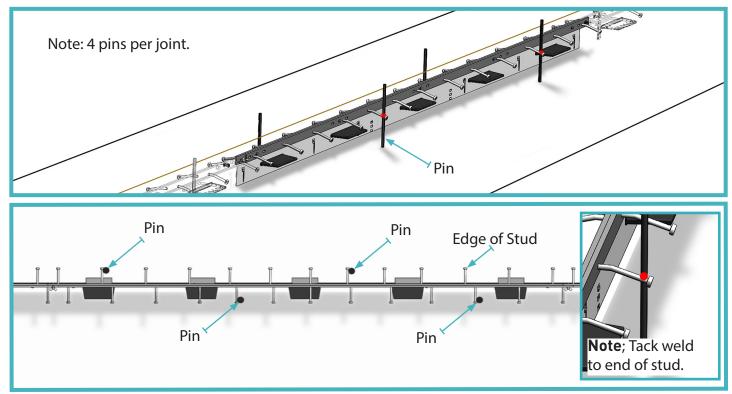







Permaban AlphaJoint Installation Guide

Installation Guide Issue V1.0 14/07/22

03 Fix joints together


Position joints end to end, unscrew the wing nut and nylon, push the 60mm offsets together and re-assemble the nylon and wing nut. Note; The 4010 top strip may move laterally during transit and require minor realignment during installation.

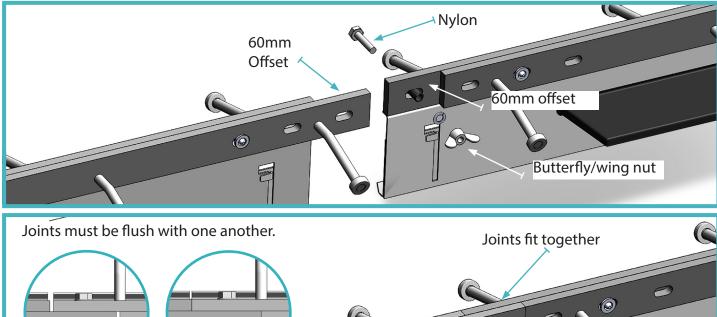

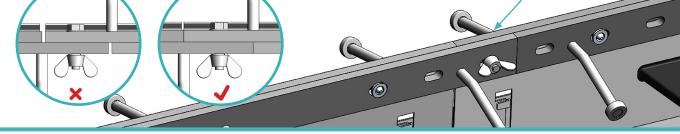

04 Adjust to Height

Use wedges to get the desired height required and check with a spirit level/optical level.

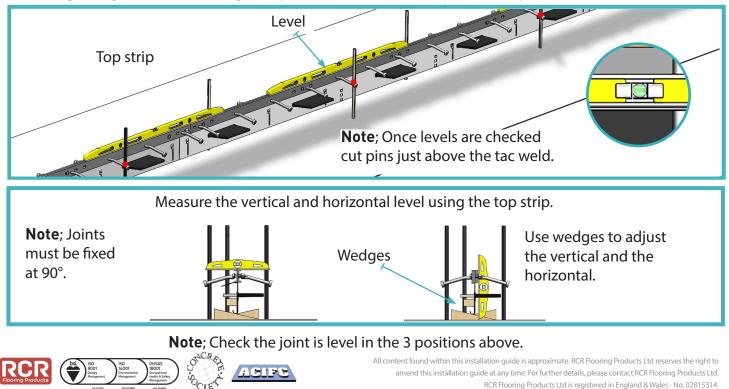


Permaban AlphaJoint Installation Guide

Installation Guide Issue V1.0 14/07/22


05 Adjust universal divider plate

To extend the universal divider plate, pull out, push down and insert.

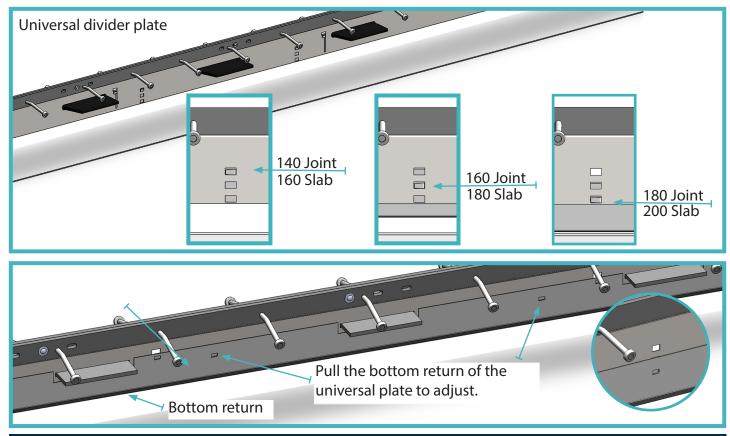

06 Support bars

This method gives good support to the adjustable divider plate after its been adjusted.

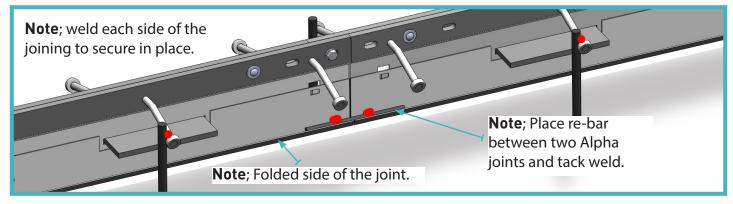




All content found within this installation guide is approximate. RCR Flooring Products Ltd reserves the right to amend this installation guide at any time. For further details, please contact RCR Flooring Products Ltd. RCR Flooring Products Ltd is registered in England & Wales - No. 02815314.

Permaban Alpha Joint Installation Guide Using Pin & Weld Method Installation Guide Issue V1.0 1/07/22 Extended Joint support bar Control of the re-bar is to be tack welded only.

07 Vibrate Concrete

Poker vibrate along length of the joint to compacted concrete.

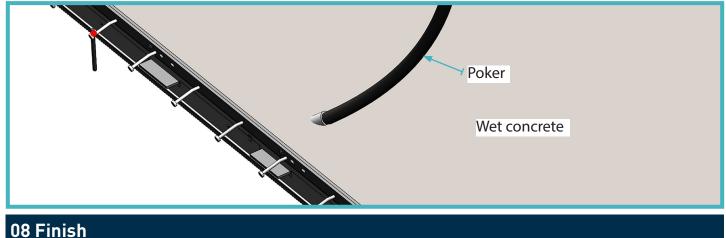

Finish concrete, flush to top of the armoured joint ensuring the rail is clearly viable.





