


Permaban Signature Slide Guide Using AlphaFix Method

Installation Guide Issue V1.0


14/07/22

01 Placing the Joint

Place Joints on the floor with top face pointing up.

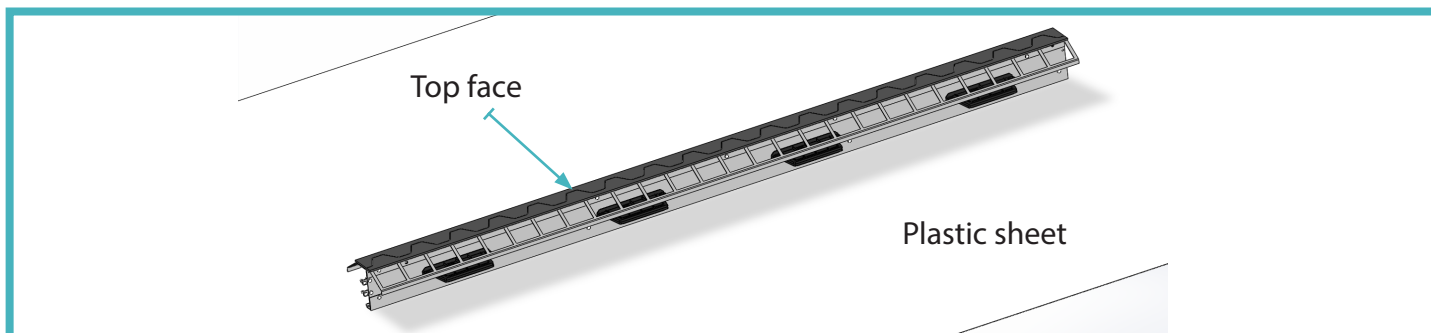


02 Set up

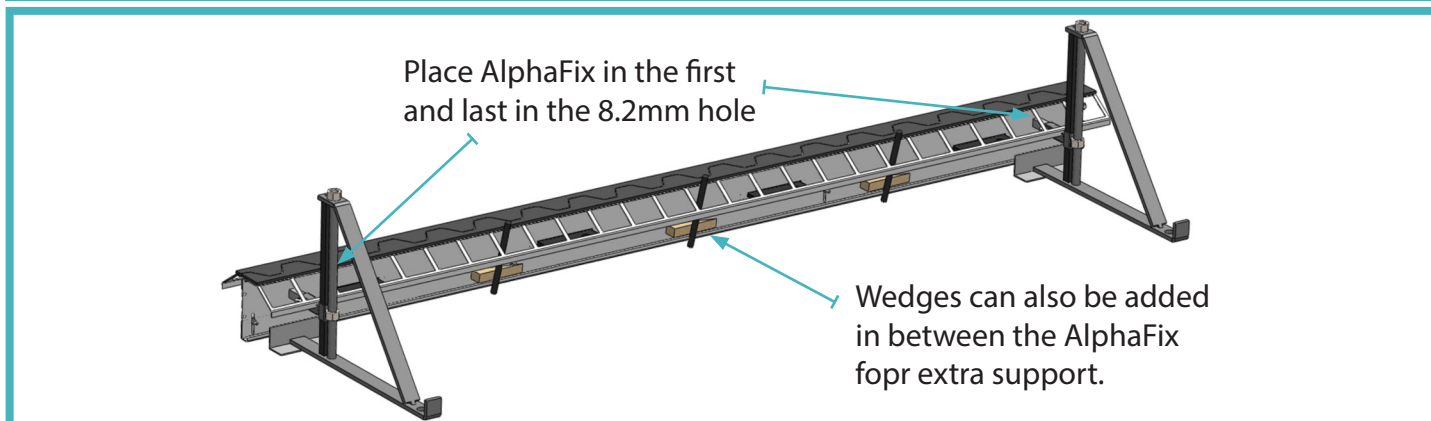

03 Fix Joints together

Stand Joints end to end, temporarily remove M6 end fixtures, push Joints together and re-assemble M6 fixtures through the vacant assembly holes.

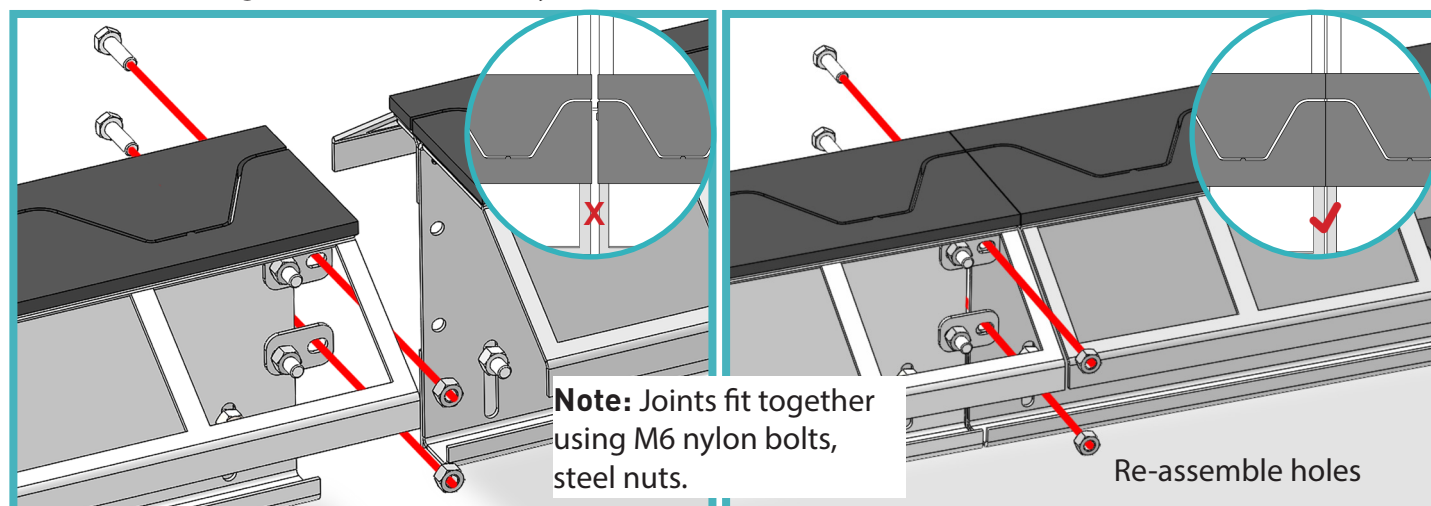


Permaban Signature Slide Installation Guide

Using AlphaFix Method


Installation Guide Issue V1.0
14/07/22

04 Adjust to Height


Use AlphaFix on either end of the Joint to adjust the height.

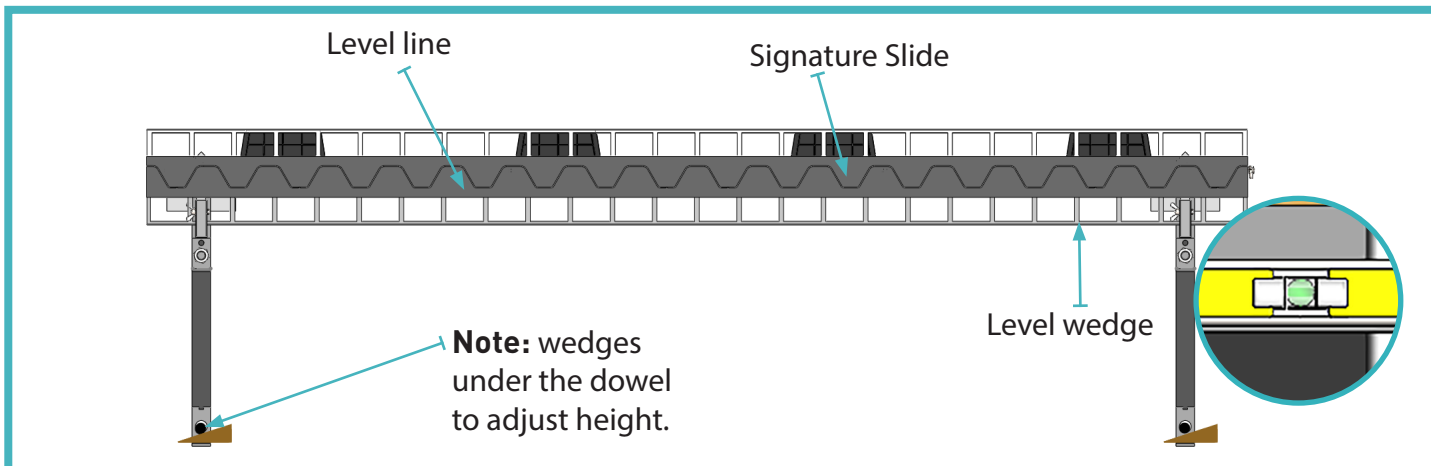

Measure the horizontal level using the top strip.

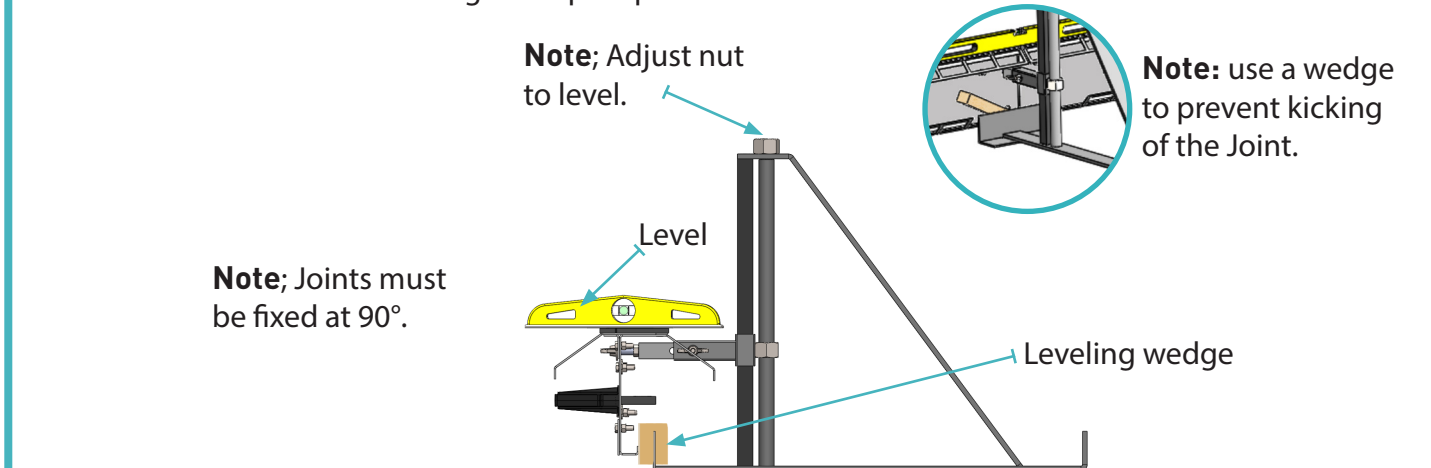

Note; Check the Joint is level in the 3 positions.

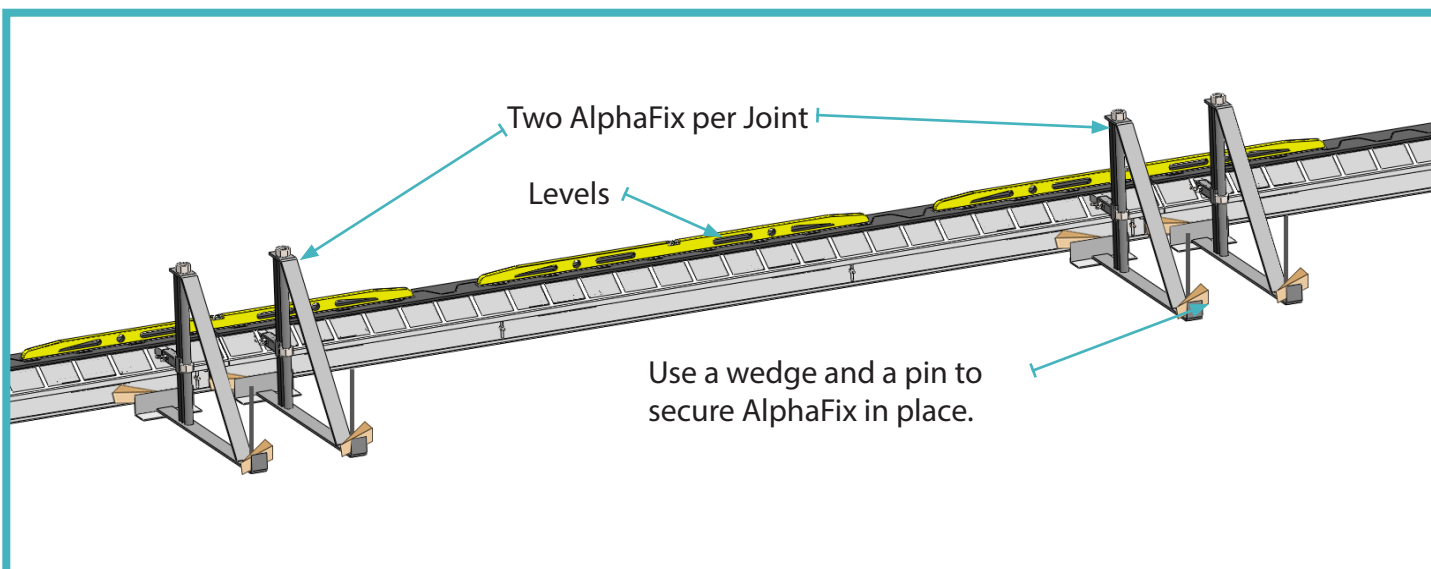


Permaban Signature slide Installation Guide

Using AlphaFix Method

Installation Guide Issue V1.0
14/07/22


05 Support bars / Wedges

This method is used to prevent kick for at the joining section of the Joints.

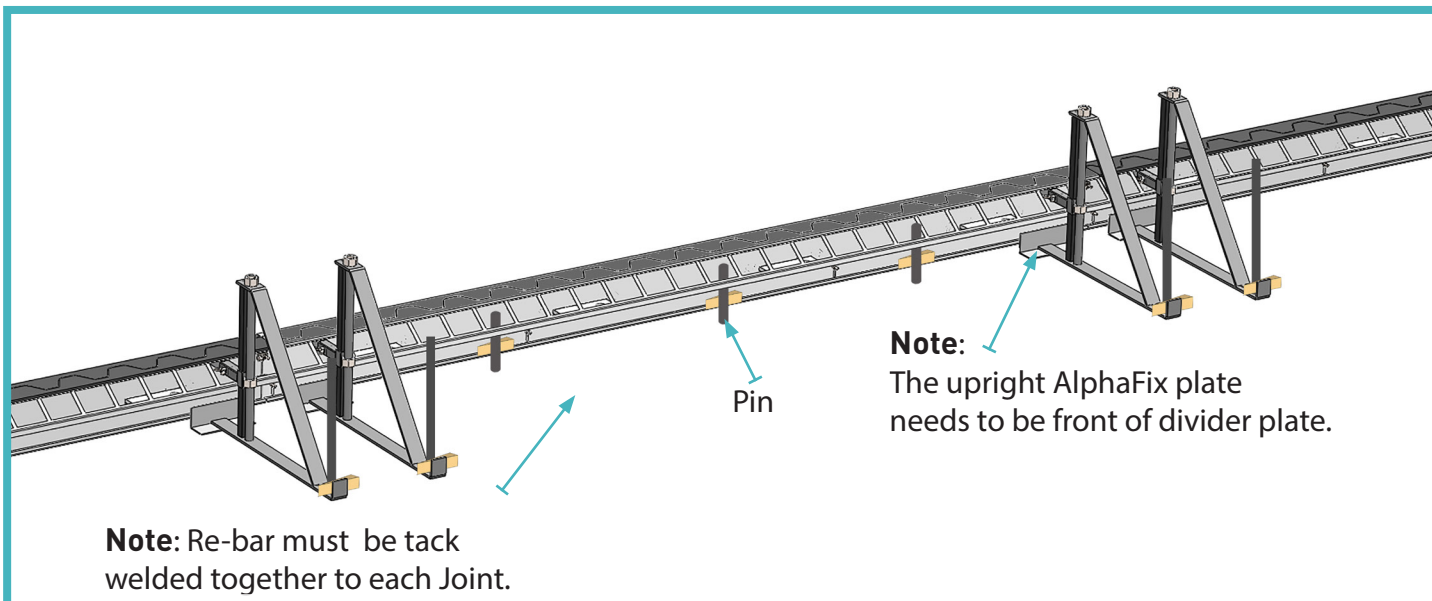

06 Vibrate Concrete

After the concrete is set, remove the AlphaFix and the AlphaFix end from the secured Joint.

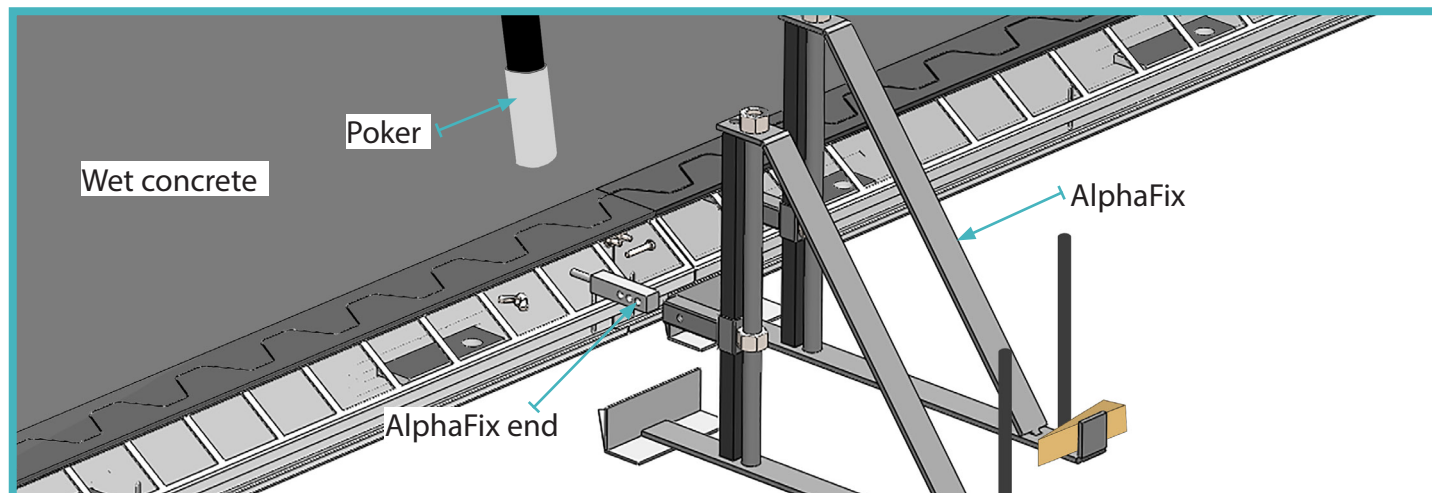

07 Finish

Finish concrete, flush to top of the Joint ensuring the rail is clearly visible.